


## Instructions how to replace a knife cord on the Megado:



The length of the cord is 152 cm (60").  
Insert the bolt with washer into the cord loop at 60 cm (23.5") from one end.

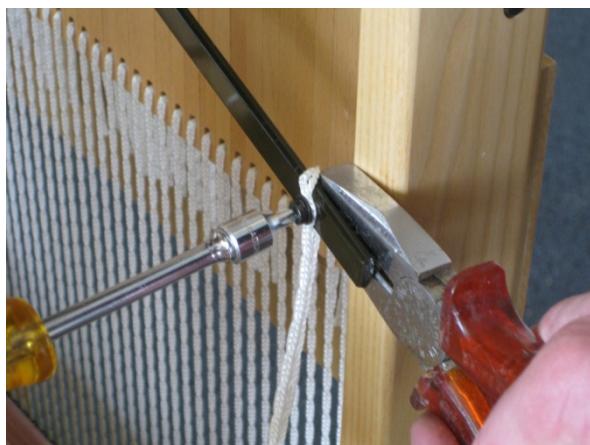

Fasten the bolt with the nut into the hole in the knife. The cross head of the little bolt is Philips head and does not match the pz2 screwdriver that was supplied with the loom.  
The shorter end of the cord should be at the top of the knife.



lead



Fix  
the

knife on the proper level. Measured at the spots where the knife enters the grooves, it should be about 75 mm (3") higher at the front.



Pull the end of the cord along the disc to determine the cord loop that corresponds to the screw hole in the disc.  
Fix the cord with the little bolt onto the disc.



Lead the cord one and a half times around the disc (mirror the cord on the disc on the other side) and connect both ends of the cord as shown in the picture.