




# W70-8

Montage van het onderstel  
Assembly of floorstand  
Montage des Untergestells

## Louët

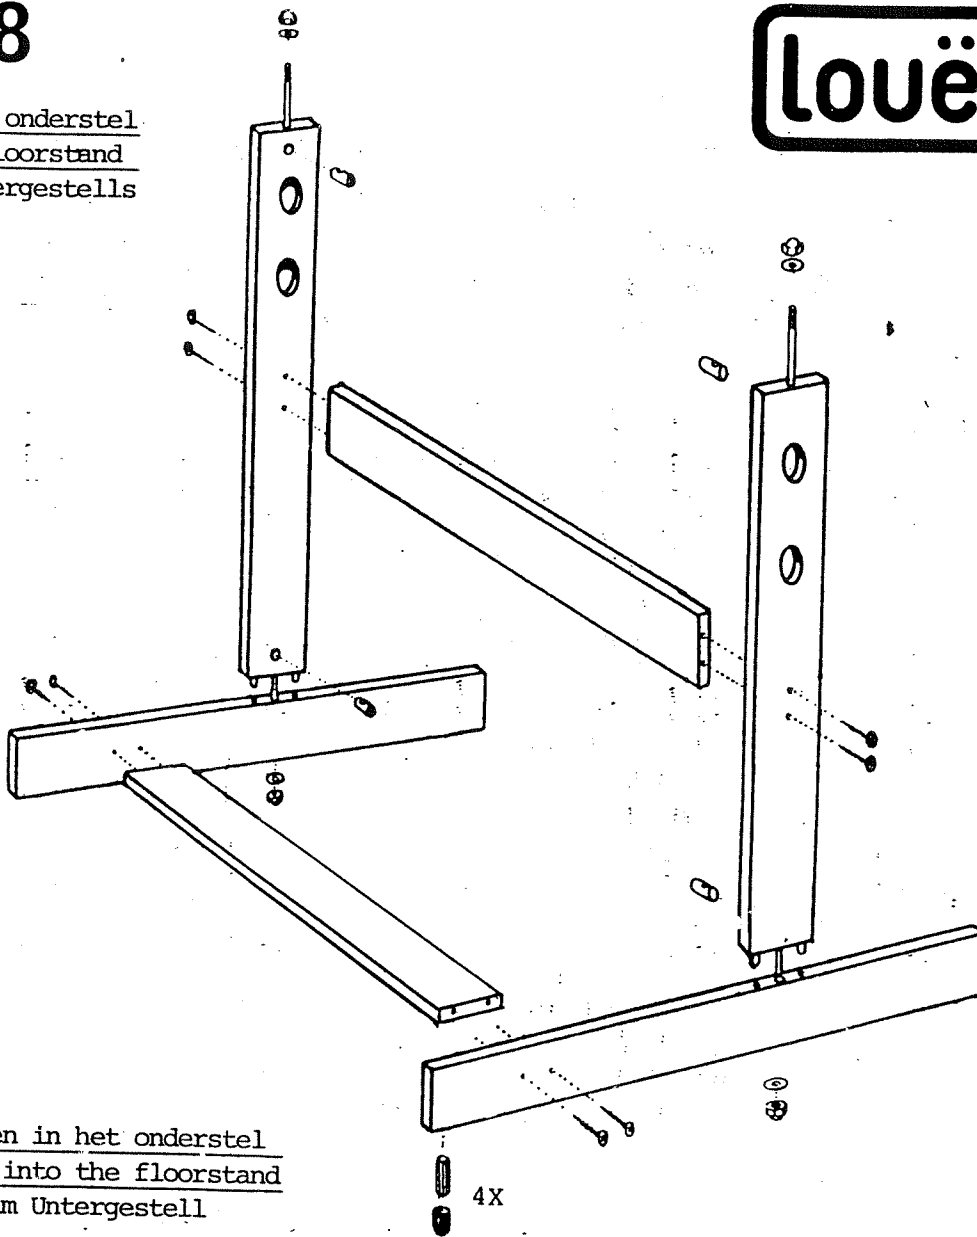

montage van de bomen in het onderstel  
mounting the beams into the floorstand  
Montage der Bäume im Untergestell

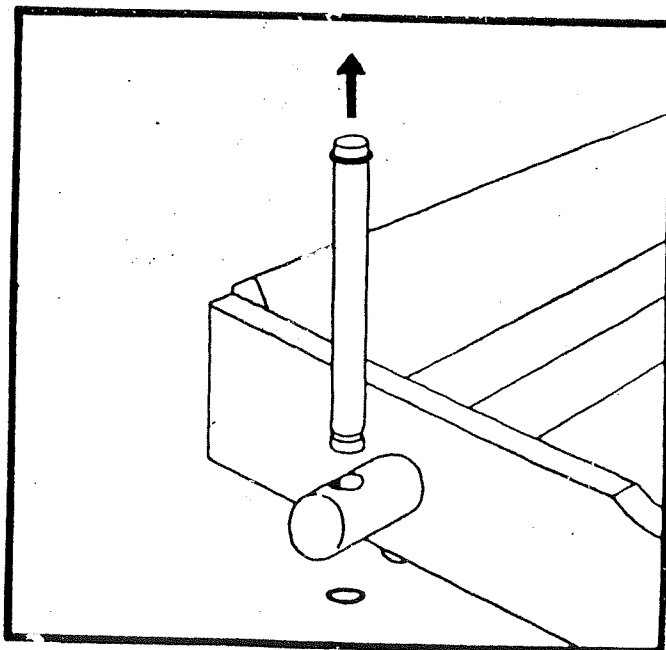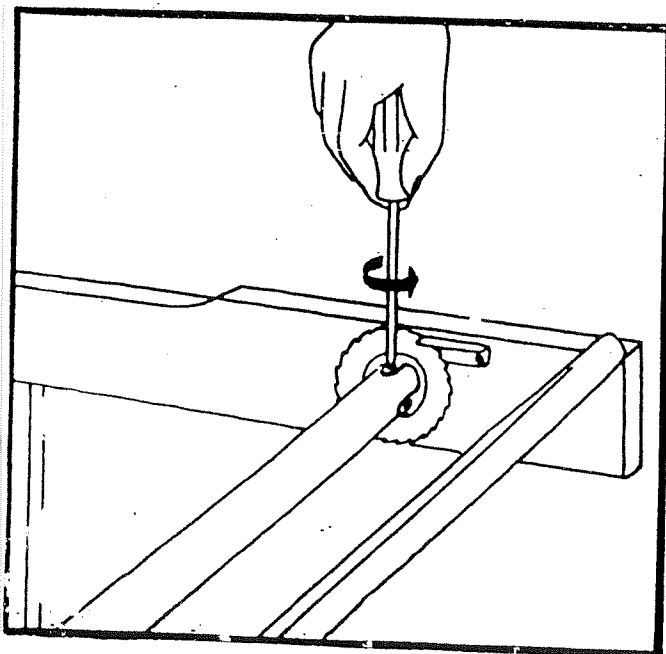

#### W-70-4 WITH STAND AND TREADLES

The tie-up for the W70-4 is a direct tie-up. Each harness (shaft) is tied to a specific treadle.

To tie the harnesses up, follow the following steps:

- 1) Attach a cord to a harness, as shown in picture (1). (Harness has to be outside the loom).
- 2) Loop cord around metal pin (fig. 2).
- 3) Attach end of cord to other side of harness.
- 4) Put harness in a slot in the castle.
- 5) With harness at appropriate height, (see fig. 3) and loop in cord about 1", adjust the ends of the cords where it attaches to the harness ends.
- 6) Repeat these steps with all 4 harnesses. Make sure that the loops around the metal pins are in following order (1,2,3,4).
- 7) Install nylon harness lock (fig. 3).
- 8) Cut 4 texsolv cords, 36" long. Make sure to cinch the ends with a flame (lighter, candle, match).
- 9) Attach 36" cords to the loops in the cords we just attached to the harnesses. (see fig. 2). Make sure to use the first real hole in the texsolv cord (one joint away from the cinched end).
- 10) Attach texsolv cord to treadle (fig. 4). Make sure treadle is in the up position.